


QFN20, 4x4, 0.5P
CASE 485E
ISSUE C

DATE 13 FEB 2018



GENERIC
MARKING DIAGRAM*

SOLDERING FOOTPRINT*

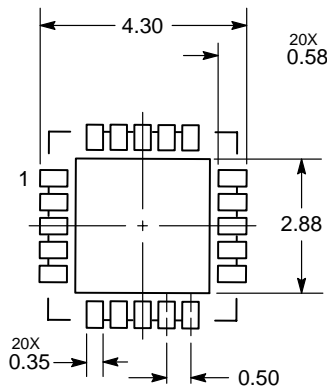

PIT T* .0074 Tw [(FROM THE TERMINAL TIP)103.9(.)]TJ -1.285 -1.115 TD .0102 Tw [(4.)-601(COPLANARIT

DIMENSIONS: MILLIMETERS

*This information is generic. Please refer to device data sheet for actual part marking. Pb iFree indicator, "G" or microdot "▪", may or may not be present. Some products may not follow the Generic Marking.

*For additional information on our Pb iFree strategy and soldering details, please download the onsemi Soldering and Mounting Techniques Reference Manual, SOLDERM/D.