
## TDFN8, 2x3, 0.5P CASE 511AK ISSUE B

## DATE 18 MAR 2015

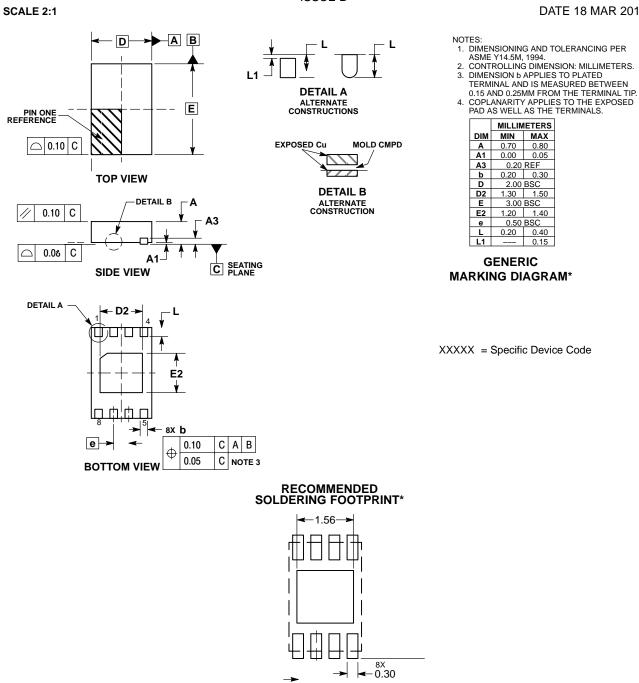

\*For additional information on our Pb-Free strategy and soldering details, please download the onsemi Soldering and Mounting Techniques Reference Manual, SOLDERRM/D.