

#####

-


-

-

TQFP100 14x14 / TQFP100
CASE 932AY
ISSUE A

DATE 07 NOV 2013

SOLDERING FOOTPRINT*

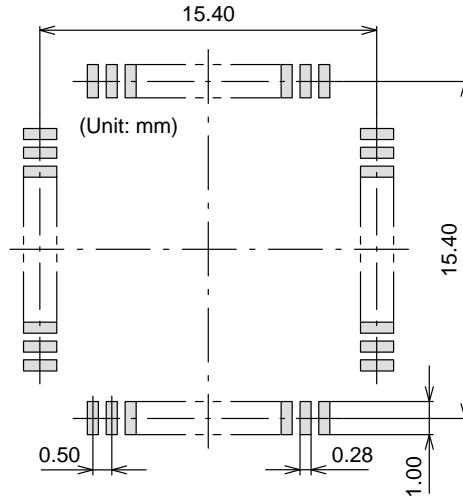

NOTE: The measurements are not to guarantee but for reference only.

*For additional information on our Pb-Free strategy and soldering details, please download the **onsemi** Soldering and Mounting Techniques Reference Manual, SOLDERRM/D.